MRF Product Support




INSTALLATION INSTRUCTIONS (English)



Fork Hitch Mover

Models: FORKHITCH2

Serial Number 13157-

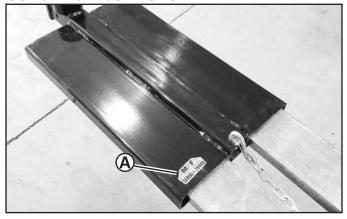

Picture note: Serial Number Location (A)

Follow these instructions to install the Fork Hitch Mover onto pallet forks.

Parking Safely

- 1. Follow the instructions in the machine operator's manual to park the machine safely.
- 2. Fully lower attachments to level ground.
- 3. Stop the machine engine and remove the key from the switch.
- 4. Do not leave the machine operator seat until the engine and all other moving machine and attachment parts have stopped.
- 5. Follow the instructions in the machine operator's manual to exit the machine safely. Use the attachment step area if one is provided.

Install the Fork Hitch Mover




- 1. Slide both pallet forks together to the center of the machine or attachment.
- 2. Fully lower the pallet forks and drive forward to insert the forks fully into both sides of the Fork Hitch Mover.
- 3. Secure the chain (A) to the machine or attachment frame to prevent the Fork Hitch Mover sliding forward on the pallet forks.

Operation

Follow the instructions in the machine or attachment operator's manual to operate the forklift.



Check to be sure the Fork Hitch Mover chain is securely attached to the machine or attachment frame to prevent sliding off the pallet forks during operation.

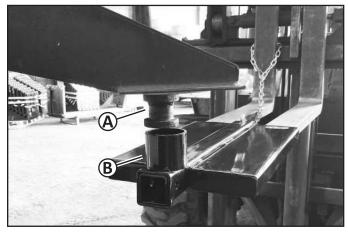

- 1. Raise the Fork Hitch Mover to capture the hitch pin (A) in the tube (B).
- 2. Follow the instructions in the machine operator's manual to travel safely.