


Installing and Removing


10. Check the attachment hose routing to the loader's front auxiliary couplers:



- If the attachment is assembled for operation with the boom out, route the hoses through the guide (D) as shown.

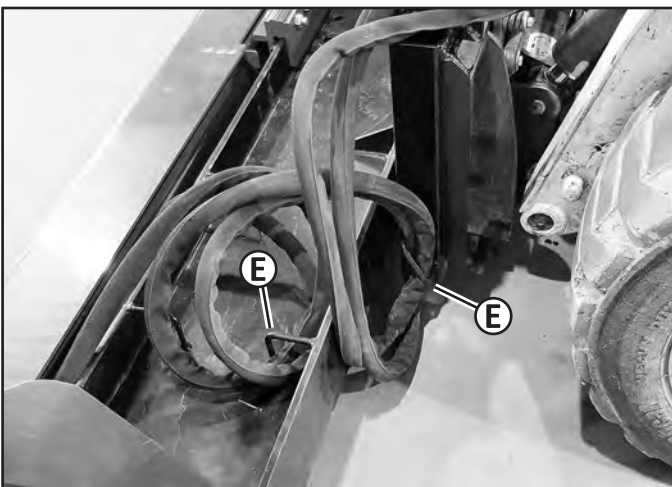

- If the attachment is assembled for operation with the boom sideways, route the hoses through the two guides (E) as shown.

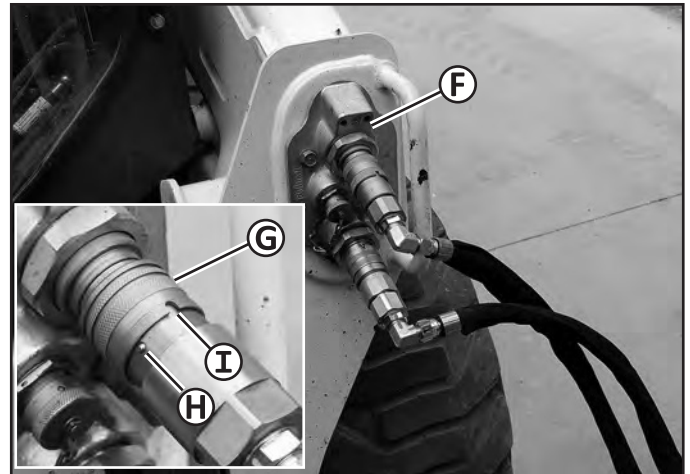

11. Connect the attachment hydraulic hoses to the loader's front auxiliary couplers (F).
- Install the male couplers into the female couplers and pull or push the sleeves (G) to be sure they are locked into place.
 - Rotate the coupler sleeves as shown so the ball (H) is outside the groove (I) to prevent the coupler disconnecting (Some sleeves may not have this locking mechanism).

Removing the Attachment

- Follow the instructions in the loader operator's manual to remove the attachment and exit the operator station safely.
- Fully lower the loader lift arms and the attachment to level ground.
- Follow instructions in the loader operator's manual to relieve hydraulic pressure in the front auxiliary hydraulic coupler lines.
- Stop the loader engine.



WARNING

AVOID INJURY!

Hydraulic couplers may become hot during operation. Avoid burns by wearing gloves when disconnecting hydraulic couplers.